


Carnegie Canvas Frame

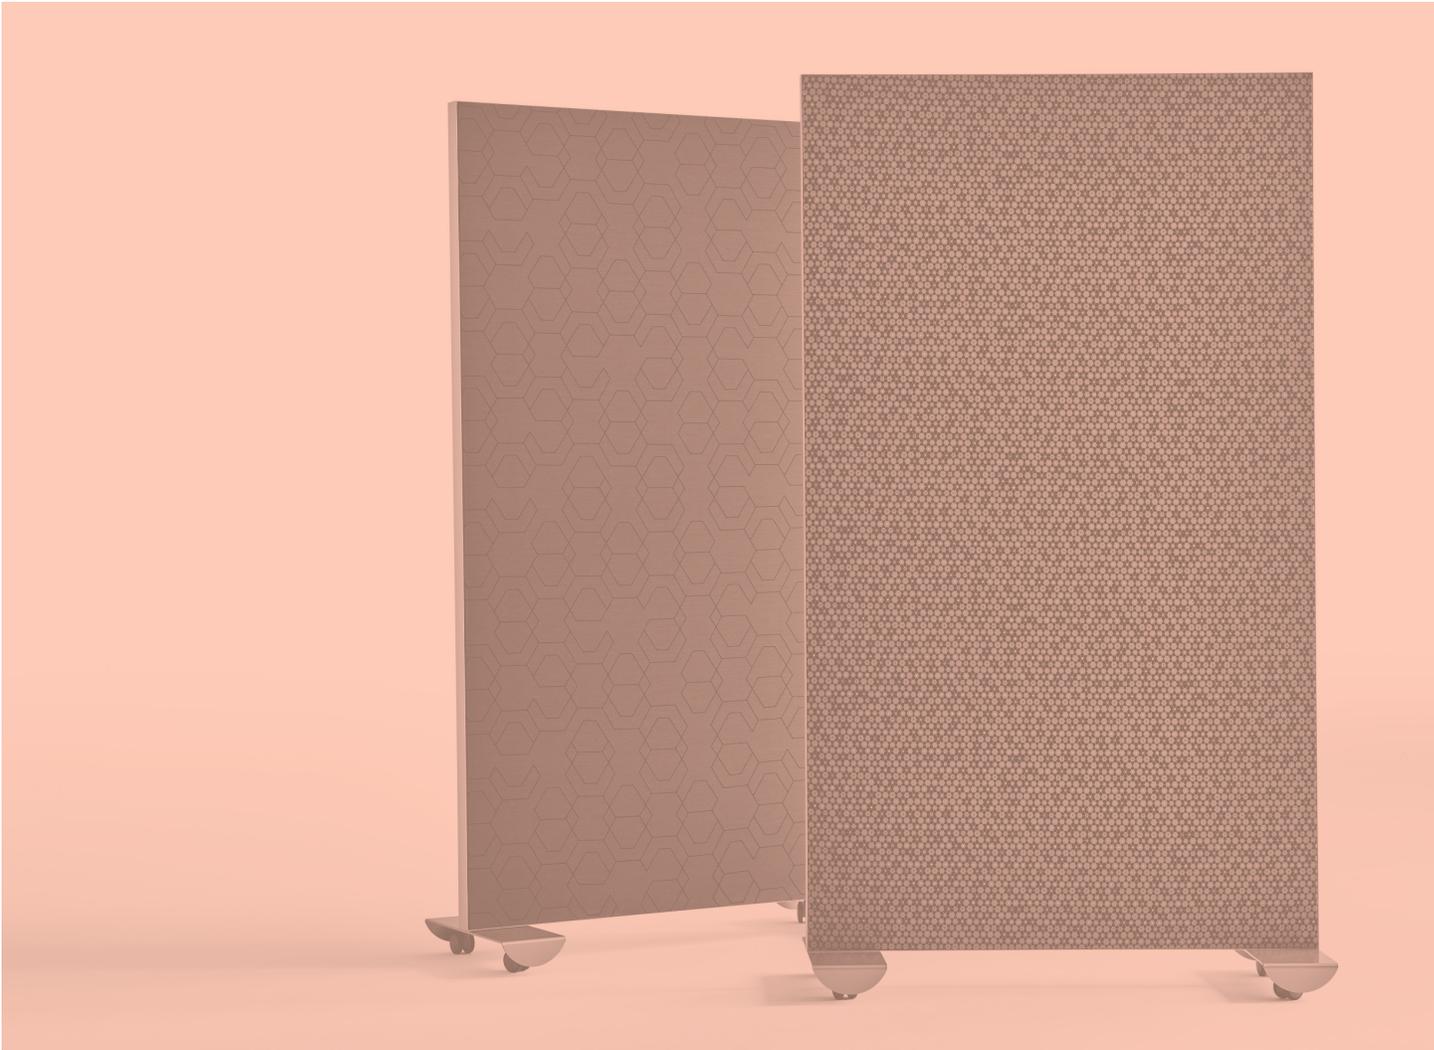


Before Getting Started


Check Your Shipment

Make sure you received everything you ordered. Please let us know if you have any questions or concerns by calling 1-800-727-6770 or visiting carnegiefabrics.com


Packaged Components

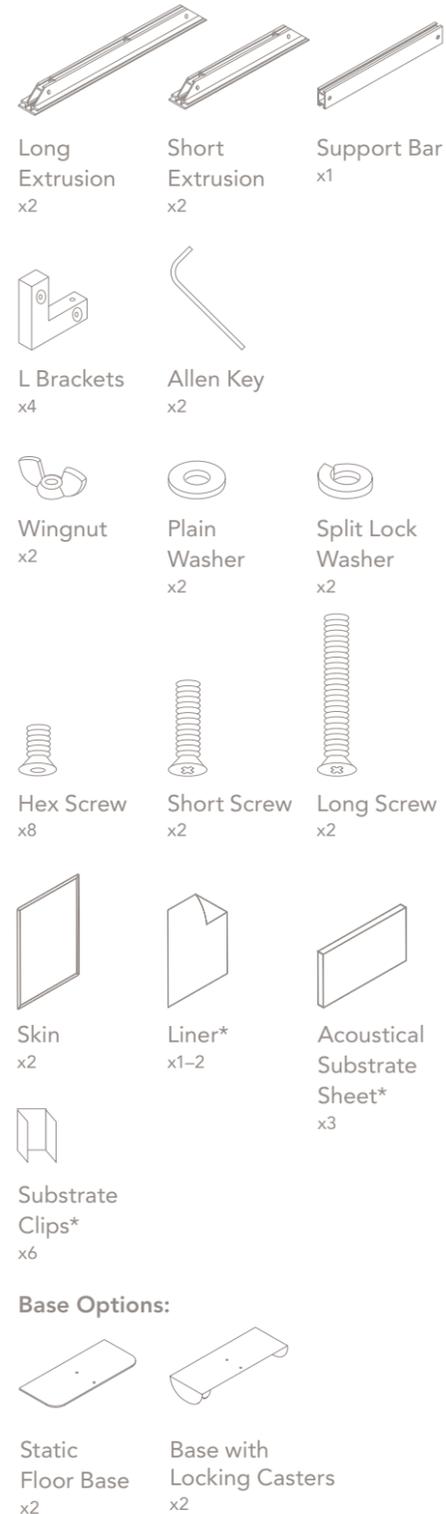


Installation Steps

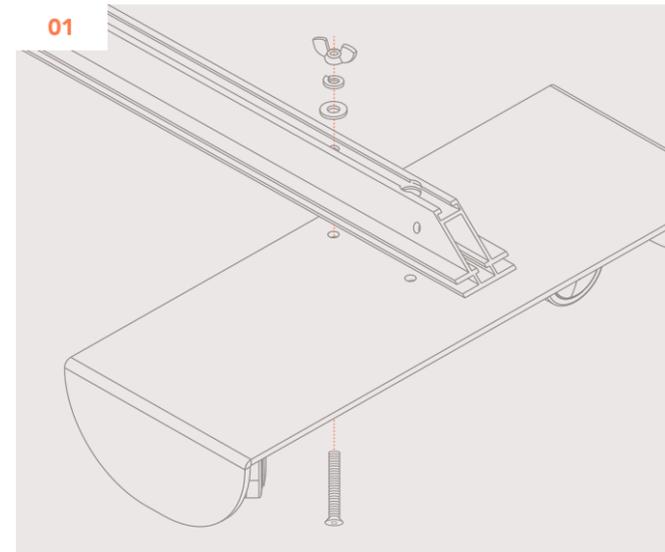


Attach a base to each end of one Short Extrusion using the long screws, plain washer, split nut washer and wingnut.

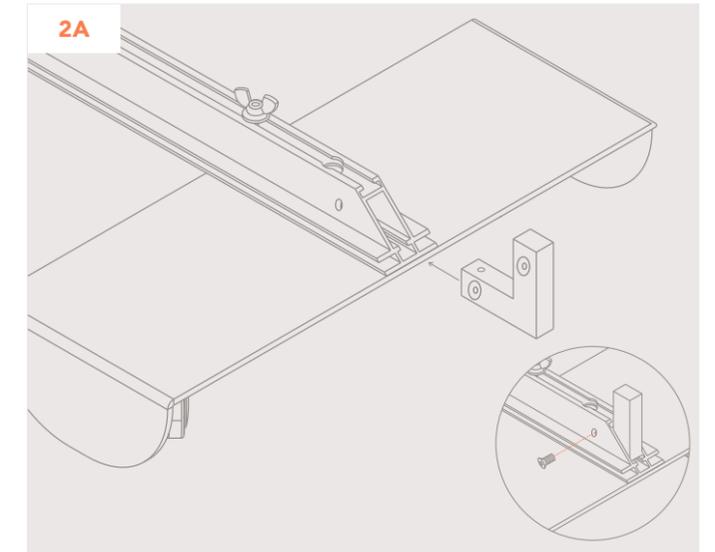

Insert and secure an L Bracket on each end of the Short Extrusion. Insert a Hex Screw into the hole on the side of the Short Extrusion and loosely secure the L Bracket.

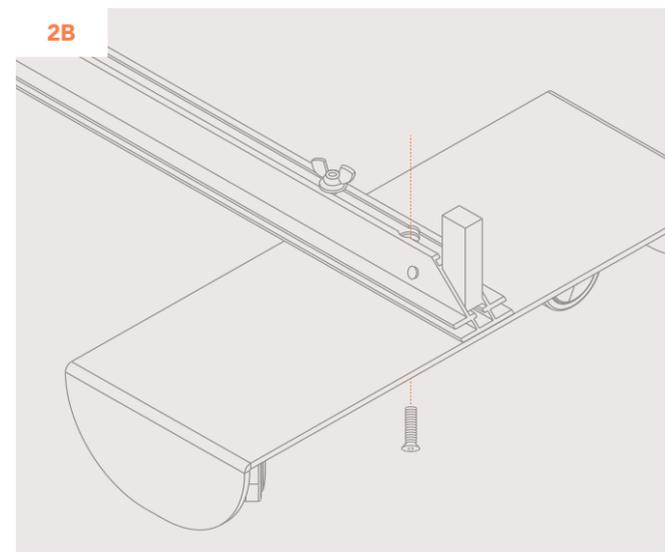


Insert a Short Screw through the bottom of the Base into the L Bracket.

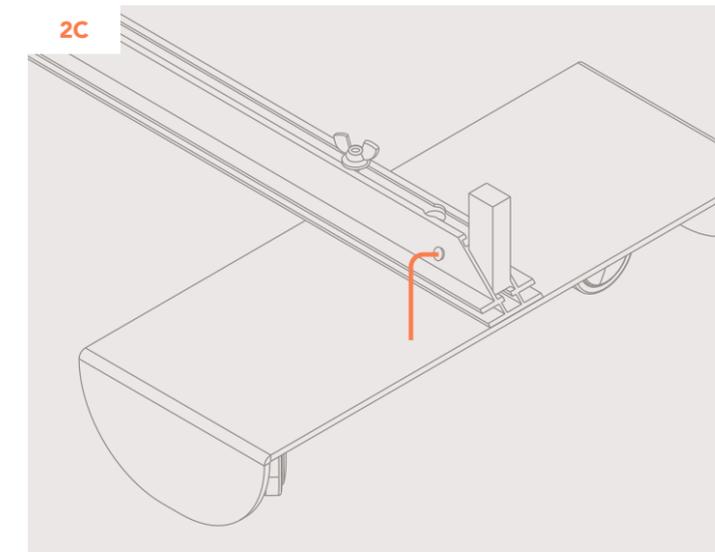


Use the Allen Key to tighten the Hex Screw that was inserted for Step 2A.


* These components will be included with shipment if specified

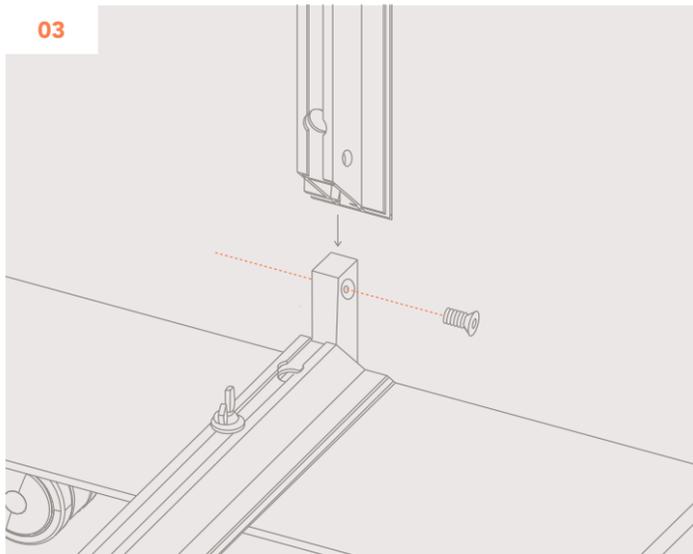


03 Insert the Long Extrusion onto the exposed end of the L Bracket and secure using the Hex Screw and Allen Key. Repeat this step on the other side.

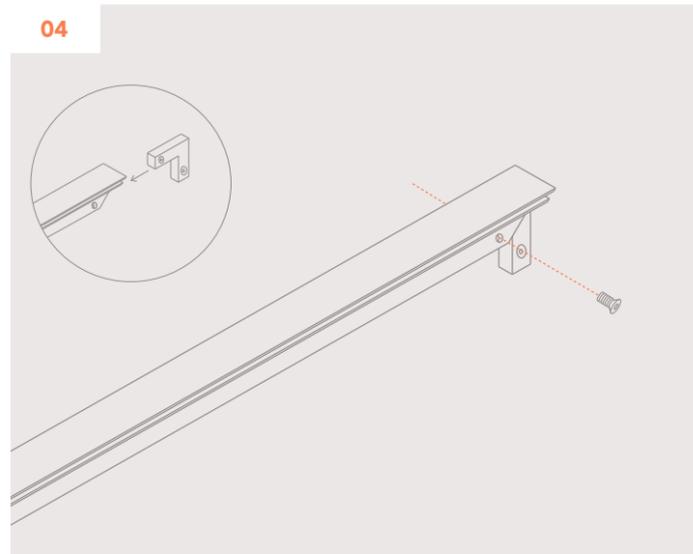


04 Attach the remaining set of L Brackets by sliding them inside the ends of the remaining Short Extrusion and loosely secure them with Allen Key and Hex Screws.

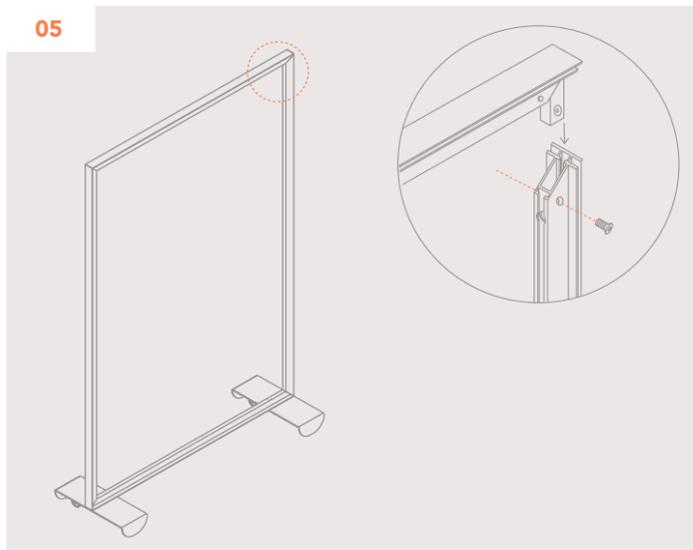


05 Insert the assembly into the Long Extrusions and secure the Hex Screws using the Allen Key.

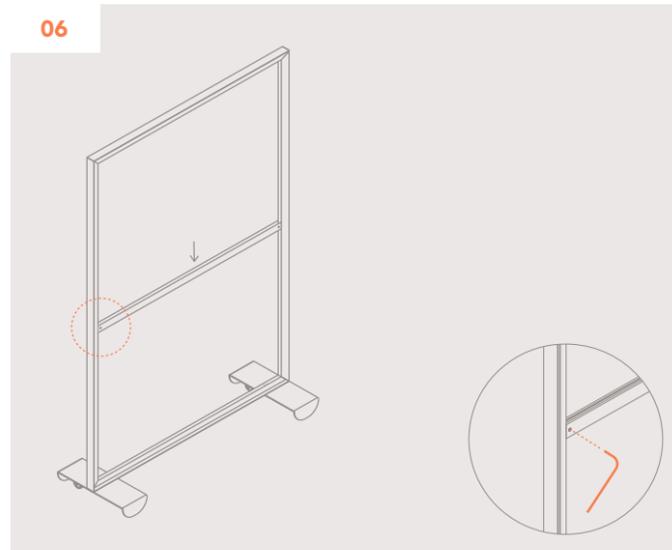


06 Insert the Support Bar into the Long Extrusion channels and tighten the screws using the Allen Key to keep the bar in place. *If no acoustical substrate or liner is being used, proceed to step 9.*

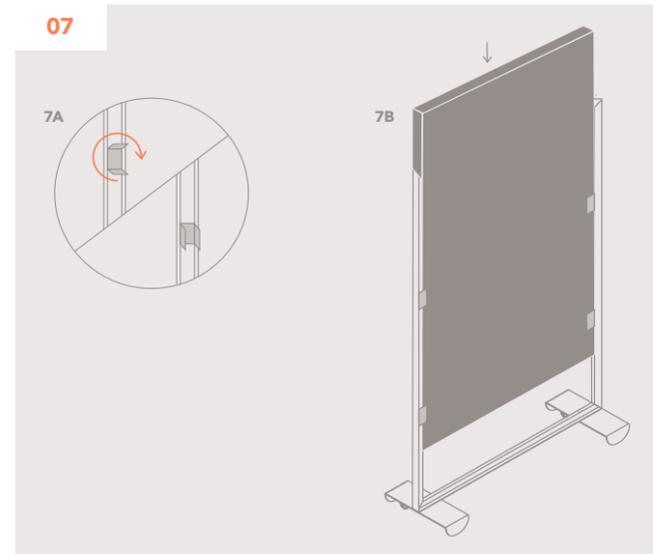

07 **For Acoustical Substrate (Optional):** 7A: Insert a clip into each Long Extrusion channel on the lower part of the frame. Turn clip gently to lock it in place. 7B: Carefully and slowly slide the substrate into the clips, pushing the substrate into the screw and wingnuts at the bottom of the frame. Repeat 7A and 7B for the 2 remaining substrate sheets. Adjust the Support Bar as needed.

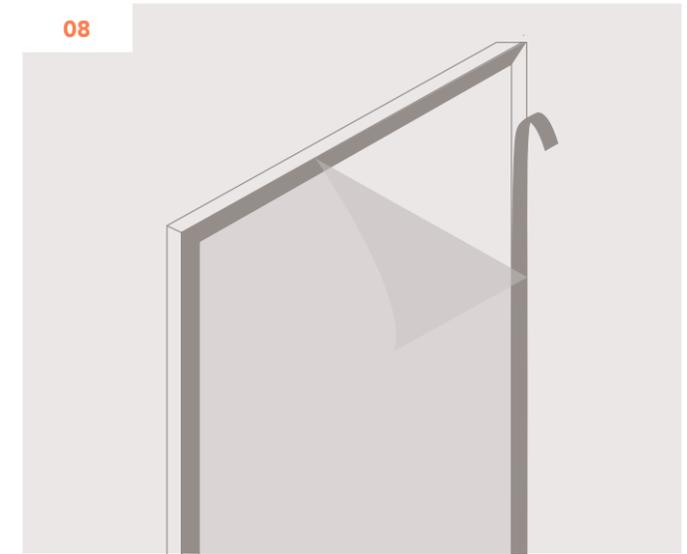

08 **For Liner (Optional):** Remove tape from the velcro along one edge of the liner. Starting with a corner, apply the edge of the liner, adhesive down, to the inside channel. Repeat until all 4 sides of the liner is applied to all 4 sides of the channel.

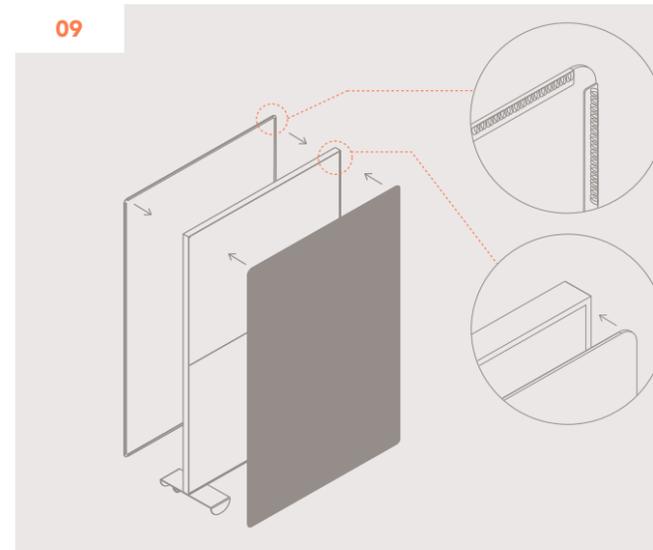

09 Install textile skins by guiding the silicone bead into the frames channel. Secure corners first and work around the frame.

Contact Us

Email

service@carnegiefabrics.com

Phone

1-800-727-6770