


Sheetrock Wall Mounted Acoustical Panels Velcro Method



Installation Steps

Packaged Components



Xorel Artform Panels

Additional Tools Needed

Measuring Tape
Pencil
Vertical Spot Laser
Level

Tips for Installation


Lay out the panels and mounting materials before installing.

We recommend having a rendering/layout of the final design on site for reference during installation.

There should be no openings/gaps between adjacent panels. If there are fit issues with panels, please contact us.

If there are open spaces in a design, an extra panel can be put (not installed) in that space as a placeholder. Once all the panels around the open space are installed the extra panel can be removed.

01

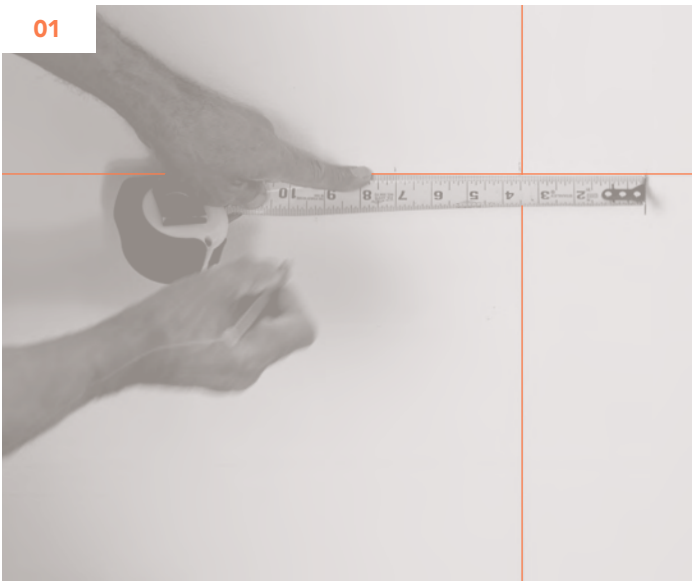

Using a level or laser, mark the wall where the first row of panels will go and determine a center point of that row.

02



Locate the arrow on the back of each panel to determine the grain line of the fabric. Each panel's grain line should be in the same direction.



03 Remove the tape from the Velcro.



04 Match the center point of the panel with the center point of the wall, and apply the panel to the wall.



05 Apply pressure to the sides of the panel to make sure the panel is secure. As you install additional panels, interlock each panel to minimize gaps.



06 Once multiple panels are installed, make sure they are level and square using a level or laser.

Contact Us

Email

service@carnegiefabrics.com

Phone

1-800-727-6770

All Xorel fabrics are C2C Certified.
Visit xorelartform.com for more information.

© 2017 Carnegie Fabrics, Inc. Printed on recycled paper.
Xorel is a registered trademark of Carnegie Fabrics Inc.
Xorel registered trademark and license to distribute is granted by permission of Carnegie Fabrics Inc. USA