
Installation Guide Xorel Artform®

Ceiling Mounted on Sheetrock Acoustical Panels Using Quick Grab

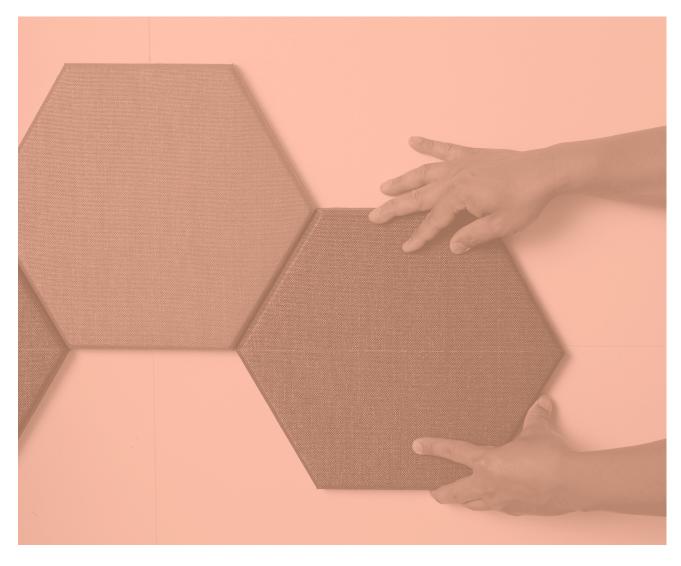

Installation Steps

Packaged Components







Xorel Artform Panels

Quick Grab

Additional Tools Needed

Measuring Tape Pencil Vertical Spot Laser Level Caulk Gun


Tips for Installation

Lay out the panels and mounting materials before installing.

We recommend having a rendering/layout of the final design on site for reference during installation.

There should be no openings/gaps between adjacent panels. If there are fit issues with panels, please contact us.

If there are open spaces in a design, an extra panel can be put (not installed) in that space as a placeholder. Once all the panels around the open space are installed the extra panel can be removed.

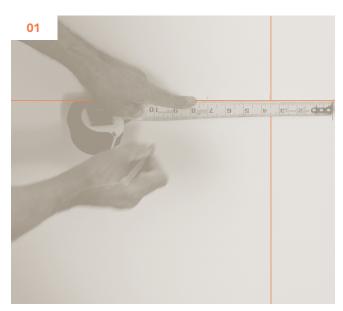

Using a level or laser, mark the ceiling where the first row of panels will go and determine a center point of that row.




Locate the arrow on the back of each panel to determine the grain line of the fabric. Each panel's grain line should be in the same direction.

Xorel Artform®



Apply the Quick Grab Formula to the back of the panel.

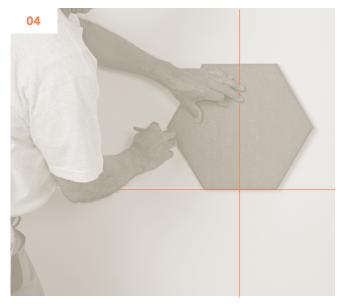

Match the center point of the panel with the center point of the ceiling, and apply the panel to transfer some of adhesive to the ceiling. Do not remove the tape from the adhesive strips.



Take the panel off the ceiling and remove the tape from the adhesive strips. Place the panel back in the same position on the ceiling. The adhesive strips hold the panel up until the Quick Grab Formula dries.

Note: The panel can't be adjusted after the adhesive strips are applied to the ceiling.



As you install additional panels, interlock each panel to minimize gaps. Once multiple panels are installed, make sure they are level and square using a level or laser.

Contact Us

Email info@xorelartform.com

Phone 1-800-727-6770