Installation Guide

Xorel Artform[°]

Wall Mounted on Sheetrock Acoustical Panels Using Quick Grab

Installation Steps

Packaged Components





Quick Grab Pins

Xorel Artform Panels

Additional Tools Needed

Measuring Tape Pencil Vertical Spot Laser Level Caulk Gun Hammer


Tips for Installation

Lay out the panels and mounting materials before installing.

We recommend having a rendering/layout of the final design on site for reference during installation.

There should be no openings/gaps between adjacent panels. If there are fit issues with panels, please contact us.

If there are open spaces in a design, an extra panel can be put (not installed) in that space as a placeholder. Once all the panels around the open space are installed the extra panel can be removed.

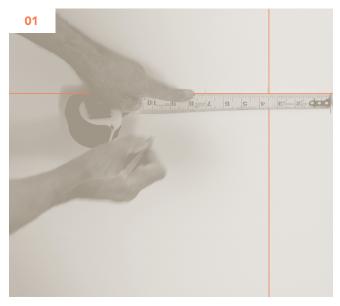

Using a level or laser, mark the wall where the first row of panels will go and determine a center point of that row.




Locate the arrow on the back of each panel to determine the grain line of the fabric. Each panel's grain line should be in the same direction.


Xorel Artform[®]



Apply the Quick Grab Formula to the back of the panel.

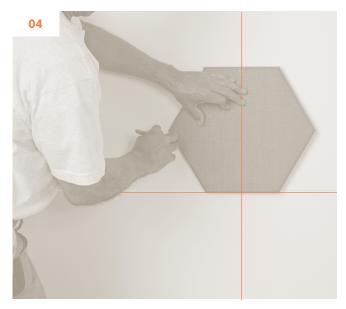

Match the center point of the panel with the center point of the wall, and apply the panel to the wall.

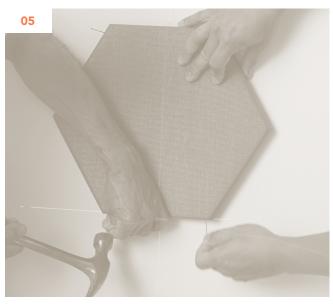

Take the panel off the wall and remove the tape from the adhesive strips. Place the panel back in the same position on the wall or ceiling. The adhesive strips hold the panel up until the Quick Grab Concrete Formula dries.

Note: The panel can't be adjusted after the adhesive strips are applied to the wall.



As you install additional panels, interlock each panel to minimize gaps. Once multiple panels are installed, make sure they are level and square using a level or laser. Finally, clip the tops of the pins once installation is complete and secure.

Contact Us

Email info@xorelartform.com

Phone 1-800-727-6770

All Xorel fabrics are C2C Certified. Visit xorelartform.com for more information.